

Please feel free to download a .pdf version of this information, sorted by NSN, with the link below.

[Current Artemis Capabilities](#)

NSN	PART NUMBER	DESCRIPTION
1005-01-166-0375	542-G903-2	HAND STATION ASSEMB
1005-01-166-0375	7565872-002	HAND STATION ASSEMB
1005-01-502-3970	00004A0100-1	CONTROL DISPLAY UNI
1005-01-502-3976	00004A2200-1	CONTROL DISPLAY UNI
1220-01-372-0720	12925899	COMPUTER,FIRE CONTROL
1220-01-531-5874	12997859	ELECTRONIC UNIT,FIRE CONTROL COMPUTER
1240-01-149-8302	12272900	LASER RANGE FINDER
1240-01-162-0367	12272555	POWER CONTROL UNIT
1240-01-264-2040	5705194	LASER RANGEFINDER W
1240-01-324-9345	12548196-2	AZIMUTH DRIVE ASSEM
1240-01-380-0280	12931823	SIGHTUNIT
1240-01-430-4340	6246027	TARGET SELECTOR GROUP,FIRE CONTROL
1240-01-430-4340	7576195	TARGET SELECTOR GROUP,FIRE CONTROL
1240-01-430-4340	7576195-001	TARGET SELECTOR GROUP,FIRE CONTROL
1260-01-165-3959	8500297-901	CONTROL-DISPLAY SYS
1270-00-349-5219	637R299G01	LASER TRANSMITTER
1270-00-349-5219	631R231G01	LASER TRANSMITTER
1270-00-349-5232	631R247G01	RECEIVER,LASER
1270-00-349-5232	637R431G01	RECEIVER,LASER
1270-01-052-3821	14-62903-15	SIGHT,LEAD COMPUTING,AUTOMATIC
1270-01-052-3821	292E920G1	SIGHT,LEAD COMPUTING,AUTOMATIC
1270-01-052-3821	SU-86/ASG-31	SIGHT,LEAD COMPUTING,AUTOMATIC
1270-01-077-0714	583R292H02	OSCILLATOR,LOW VOLT
1270-01-077-0714	583R292	OSCILLATOR,LOW VOLT
1270-01-077-0714	583R292H02	OSCILLATOR,LOW VOLT
1270-01-077-0714	7100B	OSCILLATOR,LOW VOLT
1270-01-077-0714	FS-2470-1	OSCILLATOR,LOW VOLT
1270-01-173-4932	586R719H01	TRANSMIT MICROWAVE
1270-01-173-4932	586R719H02	TRANSMIT MICROWAVE
1290-01-533-8761	10059117	PCCM

1290-01-533-8761	10059117-2	PCCM
1290-01-533-8761	10059117-3	PCCM
1290-01-533-8761	GD-561-PS	PCCM
1430-01-053-9957	645R277G01	MEMORY ASSEMBLY ACM
1430-01-057-2629	12266374	ARMING DEVICE,REMOT
1430-01-057-2629	12266374	ARMING DEVICE,REMOT
1430-01-057-2629	676980-1	ARMING DEVICE,REMOT
1430-01-119-1196	162267-01-01	INDICATOR,INTRATARGET DATA
1430-01-119-1196	875550-2	INDICATOR,INTRATARGET DATA
1430-01-221-1777	13221209	POWER MODULE ASSEMB
1430-01-221-1777	13221209	POWER MODULE ASSEMB
1440-00-462-2553	10191248	DAMPER,AZIMUTH
2350-01-199-6319	5428709	PANEL,INSTRUMENT,MO
2350-01-199-6319	5429249	PANEL,INSTRUMENT,MO
2510-01-463-1438	12388910	PANEL,VEHICULAR OPERATION
2530-01-125-0461	2600718	STEER UNIT,HYDRASTA
2530-01-125-0461	2600718	STEER UNIT,HYDRASTA
2530-01-125-0461	5419074	STEER UNIT,HYDRASTA
2530-01-125-0461	5419074	STEER UNIT,HYDRASTA
2590-01-196-4716	12284724	ELECTRONIC CONTROL UNIT
2590-01-196-4716	179952-3	ELECTRONIC CONTROL UNIT
2590-01-196-4716	179952-4	ELECTRONIC CONTROL UNIT
2920-01-067-5407	12273946	WIRING HARNESS,BRANCHED
2920-01-067-5407	12287263	WIRING HARNESS,BRANCHED
2920-01-067-5407	12287263-1	WIRING HARNESS,BRANCHED
2920-01-067-5407	12287263-2	WIRING HARNESS,BRANCHED
2920-01-067-5407	XM66503	WIRING HARNESS,BRANCHED
4920-00-283-2295	61G	TEST SET,MODULE
4920-00-450-7795	276032-1-1	TEST SET,CENTRAL AI
4920-01-031-5843	622-1279-003	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
4920-01-031-5843	C-9528/A	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
4920-01-382-3464	856A1366G03	TEST SET,POWER MANA
4920-01-382-3464	856A1366G03	TEST SET,POWER MANA
5810-01-381-6842	5DHJ4586XB	CIRCUIT CARD ASSEMBLY

5820-00-082-4000	C2329AGRA39	CONTROL,RADIO SET
5820-00-082-4000	SMD456202	CONTROL,RADIO SET
5820-00-889-3858	666151-001	CONTROL,RADIO SET
5820-00-889-3858	C2329GRA39	CONTROL,RADIO SET
5820-00-889-3858	SCDL456200	CONTROL,RADIO SET
5820-00-949-9907	C2328BGRA39	CONTROL,RADIO SET
5820-00-949-9907	SM-D-450170	CONTROL,RADIO SET
5820-00-949-9908	C2329BGRA39	CONTROL,RADIO SET
5820-00-949-9908	SM-D-450172	CONTROL,RADIO SET
5820-00-949-9908	SMD415202	CONTROL,RADIO SET
5820-01-069-2638	2114-09010-00	RECEIVER-TRANSMITTER,RADIO
5820-01-069-2638	755002A0150	RECEIVER-TRANSMITTER,RADIO
5820-01-069-2638	RT-1209	RECEIVER-TRANSMITTER,RADIO
5820-01-179-2792	A3013377-1	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5820-01-179-2792	A3148259-1	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5820-01-188-8817	A3013361-1	TUNER,RADIO FREQUENCY
5820-01-188-8817	A3142127-1	TUNER,RADIO FREQUENCY
5820-01-308-2181	635-8928-004	MODULATION ASSEMBLY
5820-01-380-4610	903001	RECEIVER-TRANSMITTER,RADIO
5820-01-380-4610	903001-1	RECEIVER-TRANSMITTER,RADIO
5820-01-387-2750	A3190979-1	TUNER,RADIO FREQUENCY
5820-01-486-3828	00008A0009	RECEIVER TRANSMITTER
5820-01-486-3828	4033-0149	RECEIVER TRANSMITTER
5820-01-486-3828	RT-1847	RECEIVER TRANSMITTER
5821-01-007-7236	1886696	TUNER,RADIO FREQUENCY
5821-01-009-8428	522&4841&004	AMPLIFIER-CONVERTER
5821-01-009-8428	522-4841-004	AMPLIFIER-CONVERTER
5821-01-009-8428	CV&3160-A&ARC165	AMPLIFIER-CONVERTER
5821-01-022-4025	01-01039-004	POWER SUPPLY SUBASSEMBLY
5821-01-104-0138	777-1891-204	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5821-01-104-0138	MX-9521/A	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5821-01-104-0139	777-1891-201	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5821-01-104-0139	MX-9519/A	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5821-01-104-0140	787-6448-205	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT

5821-01-104-0140	MX-9520/A	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5826-01-008-0540	94720600-601A	RECEIVER-COMPUTER G
5826-01-008-0540	OR-145/A & ()	RECEIVER-COMPUTER G
5826-01-031-4978	204-13479-5	CONTROL,INDICATOR
5826-01-031-4978	61710450-607A	CONTROL,INDICATOR
5826-01-048-2101	94720500-603A	TEST SET,COMPUTER
5840-00-883-9496	480230-1	RADAR SET SUBASSEMBLY
5840-01-153-8702	7327050	DETECTOR,RADIO FREQUENCY INTERFERENCE
5840-01-153-8702	7327050G001	DETECTOR,RADIO FREQUENCY INTERFERENCE
5840-01-153-8702	7327050G1	DETECTOR,RADIO FREQUENCY INTERFERENCE
5840-01-154-0006	7326440	RECEIVER,RADAR
5840-01-154-0006	7326440G001	RECEIVER,RADAR
5840-01-154-0006	7326440G1	RECEIVER,RADAR
5840-01-154-0006	R-2195/FPS-117	RECEIVER,RADAR
5840-01-208-1097	77D609702	RECEIVER,RADAR
5840-01-208-1097	77D609702G005	RECEIVER,RADAR
5840-01-208-1097	77D609702G5	RECEIVER,RADAR
5840-01-212-3320	5V680HBG-6	ENCODER,AZIMUTH
5840-01-212-3320	SM-D-800092-3	ENCODER,AZIMUTH
5840-01-212-3320	SNB60-14G1	ENCODER,AZIMUTH
5840-01-224-8134	C5001050	CIRCUIT CARD ASSEMBLY
5841-01-012-4610	790A5001G3	NAVIGATION SET,DOPPLER
5841-01-012-4610	AN/APN-213	NAVIGATION SET,DOPPLER
5841-01-057-9534	680R405G01	INVERTER,POWER,STATIC
5841-01-222-6372	2859491	RADAR SET SUBASSEMBLY
5841-01-222-6372	2859491-1	RADAR SET SUBASSEMBLY
5841-01-222-6372	2859491-2	RADAR SET SUBASSEMBLY
5841-01-231-6618	2859351-1	TRANSMITTER,RADAR
5841-01-231-6618	2859412	TRANSMITTER,RADAR
5841-01-231-6618	2859412-1	TRANSMITTER,RADAR
5841-01-231-6618	T-1500/APQ-172(V)	TRANSMITTER,RADAR
5841-01-233-0240	2859490	RADAR SET SUBASSEMBLY
5841-01-233-0240	2859490-1	RADAR SET SUBASSEMBLY
5841-01-233-0240	2859490-2	RADAR SET SUBASSEMBLY

5841-01-255-1578	2496301	INDICATOR,RADAR TARGET
5841-01-255-1578	2496301-1	INDICATOR,RADAR TARGET
5841-01-255-1578	2496301-2	INDICATOR,RADAR TARGET
5841-01-255-1578	2496307-1	INDICATOR,RADAR TARGET
5841-01-255-1578	2496307-2	INDICATOR,RADAR TARGET
5841-01-255-1578	IP-1516/APQ-172(V)	INDICATOR,RADAR TARGET
5841-01-444-3626	4070741-0501	CONTROL,RADAR SET
5855-01-203-4714	5002475	LIGHT EMITTING DIOD
5855-01-203-4714	SU-127/UA	LIGHT EMITTING DIOD
5855-01-424-7477	7577405-011	SIGHT THERMAL
5855-01-480-4876	3253259-1	RECEIVER,INFRARED
5855-01-480-4876	3253259-3	RECEIVER,INFRARED
5855-01-480-4876	3253259-5	RECEIVER,INFRARED
5855-01-480-4876	3253259-7	RECEIVER,INFRARED
5855-01-480-4876	3253259-9	RECEIVER,INFRARED
5855-01-536-9873	02009B0030	VIEWER,INFRARED
5855-01-536-9873	7609-0203	VIEWER,INFRARED
5855-01-536-9873	OMNI-5233	VIEWER,INFRARED
5860-01-430-4339	6374503	SENSOR UNIT,LASER DETECTING SET
5860-01-430-4339	7576194-002	SENSOR UNIT,LASER DETECTING SET
5865-01-449-8532	A3256659-1	COUNTERMEASURES SET
5895-00-135-1681	01-21000M01	TRANSPONDER SET
5895-00-135-1681	01-21000M01	TRANSPONDER SET
5895-00-539-1911	150620	RECEIVER-TRANSMITTER,RADIO IDENTIFICATION
5895-00-539-1911	150620	RECEIVER-TRANSMITTER,RADIO IDENTIFICATION
5895-00-539-1911	704A45-730-013	RECEIVER-TRANSMITTER,RADIO IDENTIFICATION
5895-00-539-1911	RT1063BAPX101AV	RECEIVER-TRANSMITTER,RADIO IDENTIFICATION
5895-01-007-7235	01-P04651E001	CONTROL,TRANSPONDER SET
5895-01-007-7235	01-P04651E001	CONTROL,TRANSPONDER SET
5895-01-034-0171	622-1667-001	CONTROL-INDICATOR
5895-01-034-0171	C-9637/A	CONTROL-INDICATOR
5895-01-034-3280	01-01050-005	CONTROL-INDICATOR
5895-01-034-3280	C-9640/A	CONTROL-INDICATOR
5895-01-089-3567	MPS620A	MONITOR,RADIO FREQUENCY

5895-01-089-3567	SM-C-803069	MONITOR,RADIO FREQUENCY
5895-01-089-3567	SM-C-803069-1	MONITOR,RADIO FREQUENCY
5895-01-098-7378	AN/ASN-137	NAVIGATION SET, DOPP
5895-01-151-9914	A3013347-1	CONTROL-MONITOR
5895-01-151-9914	A3148258-1	CONTROL-MONITOR
5895-01-151-9914	C-11291()/VRC	CONTROL-MONITOR
5895-01-151-9914	C-11291/VRC	CONTROL-MONITOR
5895-01-195-4844	A3013357-1	AMPLIFIER,RADIO FREQUENCY
5895-01-195-4844	A3191000-1	AMPLIFIER,RADIO FREQUENCY
5895-01-195-4844	AM-7238/VRC	AMPLIFIER,RADIO FREQUENCY
5895-01-211-3934	124619-3	INDICATOR,PANORAMIC
5895-01-266-2272	10-179-01	CONTROL-INDICATOR
5895-01-266-2272	10-179-02	CONTROL-INDICATOR
5895-01-266-2272	10-179-05	CONTROL-INDICATOR
5895-01-266-2272	508-10003-2	CONTROL-INDICATOR
5895-01-266-2272	508-10003-503	CONTROL-INDICATOR
5895-01-266-2272	508-10003-504	CONTROL-INDICATOR
5895-01-266-2272	IP-1558/ASQ-203(V)	CONTROL-INDICATOR
5895-01-266-8711	2487606	TRANSMITTER SUBASSEMBLY
5895-01-266-8711	2487606-1	TRANSMITTER SUBASSEMBLY
5895-01-266-8711	2861693	TRANSMITTER SUBASSEMBLY
5895-01-266-8711	2861693-1	TRANSMITTER SUBASSEMBLY
5895-01-298-0892	3C3893G01	FIXTURE, ENGINE MAINTENANCE, AIRCRAFT
5895-01-298-1397	755002C0440	PANEL,INDICATOR
5895-01-309-1309	A3132630	CONTROL-MONITOR
5895-01-309-1309	A3132630	CONTROL-MONITOR
5895-01-309-1309	C-11291A/VRC	CONTROL-MONITOR
5895-01-317-7617	622603	CONTROL,MODULATOR
5895-01-317-7618	622604	CONTROL,MODULATOR
5895-01-317-7618	622604-12	CONTROL,MODULATOR
5895-01-317-7619	622605	CONTROL,MODULATOR
5895-01-317-7619	622605-3	CONTROL,MODULATOR
5895-01-317-7621	622606	CONTROL,MODULATOR
5895-01-317-7621	622606-7	CONTROL,MODULATOR

5895-01-317-7622	622626	CONTROL,MODULATOR
5895-01-317-7622	622626-8	CONTROL,MODULATOR
5895-01-352-5495	2112-91700-00	FRONT PANEL ASSEMBL
5895-01-352-5495	2112-91700-00-0	FRONT PANEL ASSEMBL
5895-01-370-7222	42242	INTERFACE UNIT,COMMUNICATION EQUIPMENT
5895-01-382-3221	A3205747	CONTROL,INDICATOR
5895-01-382-3221	CD-82/VRC	CONTROL,INDICATOR
5895-01-382-3221	F12J1120	CONTROL,INDICATOR
5895-01-396-3089	10-11476-01	DATA DISPLAY GROUP
5895-01-407-2627	A3210919-1	AMPLIFIER-FREQUENCY MULTIPLIER
5895-01-407-2627	A3210919-1	AMPLIFIER-FREQUENCY MULTIPLIER
5895-01-407-2627	A3213357-1	AMPLIFIER-FREQUENCY MULTIPLIER
5895-01-407-2627	A3256646-1	AMPLIFIER-FREQUENCY MULTIPLIER
5895-01-407-2627	AM-7238B/VRC	AMPLIFIER-FREQUENCY MULTIPLIER
5895-01-447-6960	1001253G-21	RECEIVER-TRANSMITTER GROUP
5895-01-465-6873	WS-X2924-XL-V	SWITCHING GROUP,DIGITAL DATA
5895-01-476-8255	164750-0003	INTERROGATOR-TRANSPONDER SET
5895-01-477-0855	29350	FREQUENCY CONVERTER-TRANSMITTER
5895-01-477-0855	98-19604-01	FREQUENCY CONVERTER-TRANSMITTER
5895-01-521-9986	A450673	PROCESSOR,SIGNAL DATA
5895-01-556-9538	16101175-005	INDICATOR,AZIMUTH
5895-01-556-9538	83495-005	INDICATOR,AZIMUTH
5930-01-232-3287	16P3141-801	SWITCH ASSEMBLY
5930-01-232-3287	16P3141-803	SWITCH ASSEMBLY
5930-01-232-3287	16P3141-805	SWITCH ASSEMBLY
5930-01-406-9318	12387589	SWITCH,ELECTRONIC
5945-01-286-5700	12345341	RELAY ASSEMBLY
5963-01-317-9799	12324815	ELECTRONIC CONTROL
5963-01-317-9799	1502581	ELECTRONIC CONTROL
5963-01-317-9799	1502581-1	ELECTRONIC CONTROL
5963-01-364-4865	1970AS164-2	ELECTRONIC MODULE,STANDARDIZED
5963-01-364-7308	1971AS963-1	ELECTRONIC MODULE,STANDARDIZED
5963-01-378-3385	903009	ELECTRONIC MODULE,STANDARDIZED
5963-01-378-3385	903009-1	ELECTRONIC MODULE,STANDARDIZED

5963-01-422-5412	202400-4	ELECTRONIC CONTROL
5963-01-422-5412	202400-5	ELECTRONIC CONTROL
5963-01-422-5412	202407-5	ELECTRONIC CONTROL
5963-01-474-6208	12324815-1	ELECTRONIC CONTROL
5963-01-474-6208	1502581-2	ELECTRONIC CONTROL
5975-01-406-9642	A3191036-1	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5975-01-437-3993	3020276-101	JUNCTION BOX
5975-01-437-3993	3036701-101	JUNCTION BOX
5975-01-459-9483	12437317	INTERCONNECTING BOX
5975-01-486-4937	10513-2500-01	CHASSIS,ELECTRICAL-ELECTRONIC EQUIPMENT
5975-01-486-5320	10513-4000-01	PANEL,ELECTRICAL-ELECTRONIC EQUIPMENT
5980-01-480-4875	3245325-1	CONTROL-DISPLAY,OPTOELECTRONIC
5980-01-480-4875	3245325-2	CONTROL-DISPLAY,OPTOELECTRONIC
5980-01-480-4875	3245325-3	CONTROL-DISPLAY,OPTOELECTRONIC
5980-01-495-7388	00004A1401-1	ASSEMBLY,HEAD UP
5980-01-495-7388	00004A1401-1	ASSEMBLY,HEAD UP
5985-00-252-3494	692751-1	ANTENNA
5985-00-252-3494	AS-2565()/APQ-122(V	ANTENNA
5985-01-399-4556	903128	ANTENNA
5985-01-399-4556	903128-1	ANTENNA
5985-01-399-4556	9327-820-2	ANTENNA
5985-01-408-3549	903124	HORN,WAVEGUIDE
5985-01-408-3549	903124-1	HORN,WAVEGUIDE
5985-01-418-7029	7010-7832-600	ATTENUATOR ASSEMBLY
5985-01-418-7029	7010-7832-800	ATTENUATOR ASSEMBLY
5985-01-418-7029	7010-7838-600	ATTENUATOR ASSEMBLY
5985-01-459-5388	10208-5025-05	COUPLER,ANTENNA
5985-01-459-5388	RF-382A-15	COUPLER,ANTENNA
5985-01-459-5388	RF-382A-15	COUPLER,ANTENNA
5985-01-468-1980	RF-382A-12	COUPLER,ANTENNA
5985-01-477-1810	7010-7832-800	ATTENUATOR ASSEMBLY
5985-01-500-3511	RF-382	ANTENNA COUPLER GROUP
5995-01-082-8114	1642851	CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL
5995-01-082-8114	1696367	CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL

5995-01-270-9074	13282616	CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED
5995-01-270-9074	13282616	CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED
5996-01-492-6274	100W1000B	AMPLIFIER,RADIO FREQUENCY
5998-00-349-5874	631R218G01	ELECTRONIC COMPONENTS ASSEMBLY
5998-01-003-6361	350-0192-010	ELECTRONIC COMPONENTS ASSEMBLY
5998-01-003-6361	350-0192-020	ELECTRONIC COMPONENTS ASSEMBLY
5998-01-012-0990	1030761-112	CIRCUIT CARD ASSEMBLY
5998-01-065-9011	2114-91030-00	CIRCUIT CARD ASSEMBLY
5998-01-065-9011	755002A0320	CIRCUIT CARD ASSEMBLY
5998-01-072-4599	SM-D-803195	CIRCUIT CARD ASSEMBLY
5998-01-072-4599	SM-D-803195	CIRCUIT CARD ASSEMBLY
5998-01-074-4139	4026921-901	CIRCUIT CARD ASSEMBLY
5998-01-076-8417	634734-305	CIRCUIT CARD ASSEMBLY
5998-01-076-8417	709734-301	CIRCUIT CARD ASSEMBLY
5998-01-076-8417	709734-301	CIRCUIT CARD ASSEMBLY
5998-01-092-2748	SM-D-803137	CIRCUIT CARD ASSEMBLY
5998-01-092-2749	SM-D-803140	CIRCUIT CARD ASSEMBLY
5998-01-108-9786	2600882	CIRCUIT CARD ASSEMBLY
5998-01-108-9786	6227570	CIRCUIT CARD ASSEMBLY
5998-01-109-2109	SM-D-803128	CIRCUIT CARD ASSEMBLY
5998-01-160-5548	5515	CIRCUIT CARD ASSEMBLY
5998-01-160-5548	7849185	CIRCUIT CARD ASSEMBLY
5998-01-160-5548	7849185P001	CIRCUIT CARD ASSEMBLY
5998-01-160-5548	7849185P1	CIRCUIT CARD ASSEMBLY
5998-01-161-1678	460710-01-02	CIRCUIT CARD ASSEMBLY
5998-01-161-1678	460710-01-02	CIRCUIT CARD ASSEMBLY
5998-01-171-3776	393788	CIRCUIT CARD ASSEMBLY
5998-01-171-3776	393788	CIRCUIT CARD ASSEMBLY
5998-01-199-9648	456496-03	CIRCUIT CARD ASSEMBLY
5998-01-199-9648	456496-03	CIRCUIT CARD ASSEMBLY
5998-01-200-0128	12316546	CIRCUIT CARD ASSEMBLY
5998-01-203-7299	5428412	CIRCUIT CARD ASSEMBLY
5998-01-203-7299	5428412	CIRCUIT CARD ASSEMBLY
5998-01-203-7299	5428412	CIRCUIT CARD ASSEMBLY

5998-01-206-0084	9338618	CIRCUIT CARD ASSEMBLY
5998-01-299-7562	120616-001	CIRCUIT CARD ASSEMBLY
5998-01-303-7858	12549748	CIRCUIT CARD ASSEMBLY
5998-01-318-4327	3D56968	CIRCUIT CARD ASSEMBLY
5998-01-318-4327	3D56968G01	CIRCUIT CARD ASSEMBLY
5998-01-322-7181	204-53097	CIRCUIT CARD ASSEMBLY
5998-01-322-7181	204-53097-152	CIRCUIT CARD ASSEMBLY
5998-01-323-0635	460720	CIRCUIT CARD ASSEMBLY
5998-01-323-0635	460720-05-01	CIRCUIT CARD ASSEMBLY
5998-01-323-0635	460720-05-02	CIRCUIT CARD ASSEMBLY
5998-01-323-0635	460720-05-03	CIRCUIT CARD ASSEMBLY
5998-01-323-0635	460720-05-04	CIRCUIT CARD ASSEMBLY
5998-01-324-9717	121301-002	CIRCUIT CARD ASSEMBLY
5998-01-353-9930	A3148261-1	CIRCUIT CARD ASSEMBLY
5998-01-363-3709	120625-101	CIRCUIT CARD ASSEMBLY
5998-01-366-3122	755090A0421-3	BACKPLANE ASSEMBLY
5998-01-379-9563	7005-7848-800	CIRCUIT CARD ASSEMBLY
5998-01-379-9563	7010-7838-800	CIRCUIT CARD ASSEMBLY
5998-01-379-9846	7011-7845-700	CIRCUIT CARD ASSEMBLY
5998-01-379-9894	7010-3482-600	CIRCUIT CARD ASSEMBLY
5998-01-379-9894	7010-7831-600	CIRCUIT CARD ASSEMBLY
5998-01-379-9956	7005-7840-300	CIRCUIT CARD ASSEMBLY
5998-01-379-9956	7005-7846-100	CIRCUIT CARD ASSEMBLY
5998-01-379-9956	7010-7836-100	CIRCUIT CARD ASSEMBLY
5998-01-380-3923	7005-7849-200	CIRCUIT CARD ASSEMBLY
5998-01-380-6494	7005-7846-000	CIRCUIT CARD ASSEMBLY
5998-01-380-6494	7010-7836-000	CIRCUIT CARD ASSEMBLY
5998-01-380-6516	7011-7845-600	CIRCUIT CARD ASSEMBLY
5998-01-380-6516	7011-785-200	CIRCUIT CARD ASSEMBLY
5998-01-381-6842	5DHJ4586XB	CIRCUIT CARD ASSEMBLY
5998-01-381-7007	5DHS4607XA	CIRCUIT CARD ASSEMBLY
5998-01-433-7019	06-1414139-5	CIRCUIT CARD ASSEMBLY
5998-01-435-9243	7010-1530-000	CIRCUIT CARD ASSEMBLY
5998-01-435-9243	7010-1531-500	CIRCUIT CARD ASSEMBLY

5998-01-437-5405	130-000488-G001	CIRCUIT CARD ASSEMBLY
5998-01-437-5405	130-013219-G010	CIRCUIT CARD ASSEMBLY
5998-01-445-5564	7576192-003	ELECTRONIC COMPONENTS ASSEMBLY
5998-01-450-9532	6800-D-40610-3	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	6800-D-40610-3	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	68300B-D-40610	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	68300B-D-40610	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	68300B-D-40810	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	D40610-3	CIRCUIT CARD ASSEMBLY
5998-01-450-9532	D40610-3	CIRCUIT CARD ASSEMBLY
5998-01-451-6770	7005-1140-300	CIRCUIT CARD ASSEMBLY
5998-01-461-4195	714224-1	CIRCUIT CARD ASSEMBLY
5998-01-461-4195	714224-1	CIRCUIT CARD ASSEMBLY
5998-01-461-5307	10512-6100-01	CIRCUIT CARD ASSEMBLY
5998-01-464-3174	708537-901	CIRCUIT CARD ASSEMBLY
5998-01-480-3974	7011-1132-700	CIRCUIT CARD ASSEMBLY
5998-01-486-4971	10511-7100-01	PRINTED CIRCUIT BOARD
5998-01-486-5435	10513-6400-01	PRINTED CIRCUIT BOARD
5998-01-490-2919	7010-1531-400	CIRCUIT CARD ASSEMBLY
5998-01-492-9712	7011-1132-600	CIRCUIT CARD ASSEMBLY
5998-01-495-6062	00004A2206-1	CIRCUIT CARD ASSEMBLY
5998-01-495-6062	00004A2206-1	CIRCUIT CARD ASSEMBLY
5998-01-526-2256	6800-D-40634-3	CIRCUIT CARD ASSEMBLY
5998-01-526-2256	D40634-3	CIRCUIT CARD ASSEMBLY
5998-01-552-5282	10513-6400-04	CIRCUIT CARD ASSEMBLY
5998-21-920-2996	X2-XRA3-040	CIRCUIT CARD ASSEMBLY
5998-21-920-2996	X2-XRPA-040	CIRCUIT CARD ASSEMBLY
5999-01-190-6175	12321130	ELECTRONIC COMPONENTS ASSEMBLY
5999-01-210-3077	13265112	BACKPLANE ASSEMBLY
5999-01-210-3077	13265112	BACKPLANE ASSEMBLY
5999-01-210-3077	13265112	BACKPLANE ASSEMBLY
5999-01-224-2780	9376644	CIRCUIT CARD ASSEMBLY
5999-01-224-2780	F5T5028	CIRCUIT CARD ASSEMBLY
5999-01-240-1249	SM-D-657598	CIRCUIT CARD ASSEMBLY

5999-01-275-8092	12325160	CIRCUIT CARD ASSEMBLY
5999-01-502-8775	7485547	STRIP,ELECTRICAL GROUNDING
5999-01-502-8775	7485547-002	STRIP,ELECTRICAL GROUNDING
5999-01-502-8775	7485547-002	STRIP,ELECTRICAL GROUNDING
5999-01-502-8775	7485547-002	STRIP,ELECTRICAL GROUNDING
6105-01-147-5586	725016A1088	MOTOR,ALTERNATING CURRENT
6105-01-147-5586	725016A1088	MOTOR,ALTERNATING CURRENT
6105-01-147-5586	C28401	MOTOR,ALTERNATING CURRENT
6105-01-443-8388	12524409	MOTOR,DIRECT CURRENT
6105-01-443-8388	12524409	MOTOR,DIRECT CURRENT
6105-01-443-8388	465-4409	MOTOR,DIRECT CURRENT
6110-00-463-1517	3S2060DC149C1A	CONTROL,GENERATOR
6110-00-463-1517	3S2060DC149C1A	CONTROL,GENERATOR
6110-00-463-1517	4B97502-101D	CONTROL,GENERATOR
6110-01-091-7827	SM-D-803191	REGULATOR,FREQUENCY
6110-01-266-4006	12345539	CONSOLE,POWER DISTRIBUTION
6110-01-285-9848	12345235	DISTRIBUTION BOX
6110-01-334-8912	111K0200-1	CONTROLLER,MOTOR
6110-01-334-8912	13229E4211	CONTROLLER,MOTOR
6110-01-497-6960	12387900-1	DISTRIBUTION BOX
6110-01-502-3969	00004A2000-1	DISTRIBUTION BOX
6110-01-502-3969	00004A2000-1	DISTRIBUTION BOX
6115-01-488-7433	12387361-3	GENERATOR SET,DIESEL ENGINE
6115-01-488-7433	202000-10	GENERATOR SET,DIESEL ENGINE
6130-00-089-8034	2073404-0704	PWR SUPPLY ASSY
6130-00-089-8034	2073404-0705	PWR SUPPLY ASSY
6130-00-089-8034	2073404-0705	PWR SUPPLY ASSY
6130-00-089-8034	2073404-0705	PWR SUPPLY ASSY
6130-00-089-8034	21496	PWR SUPPLY ASSY
6130-00-089-8034	SP317	PWR SUPPLY ASSY
6130-00-089-8034	SP347	PWR SUPPLY ASSY
6130-00-892-5051	772-5296-002	POWER SUPPLY
6130-00-892-5051	772-5296-002	POWER SUPPLY
6130-00-892-5051	PP-4992/ARC-132	POWER SUPPLY

6130-01-016-4167	792-6305-001	POWER SUPPLY
6130-01-016-4167	PP-7031A/ARC165	POWER SUPPLY
6130-01-022-4025	01-01039-004	POWER SUPPLY SUBASSEMBLY
6130-01-143-3275	021-309	MODULE,POWER SUPPLY
6130-01-143-3275	021-309G2	MODULE,POWER SUPPLY
6130-01-143-3275	5500-001	MODULE,POWER SUPPLY
6130-01-216-0704	331390	POWER SUPPLY
6130-01-217-3178	331391-1	POWER SUPPLY ASSEMBLY
6130-01-217-3178	802023-1	POWER SUPPLY ASSEMBLY
6130-01-238-4390	755090A0700-3	POWER SUPPLY
6130-01-245-7156	2496540-2	POWER SUPPLY
6130-01-248-6604	8523875-30	POWER SUPPLY
6130-01-249-6212	801410-1	POWER SUPPLY
6130-01-311-2841	97AA001	POWER SUPPLY
6130-01-311-2841	EMS-40-125-2-D	POWER SUPPLY
6130-01-311-2841	LT-863	POWER SUPPLY
6130-01-351-1088	413B-4-28AV	INVERTER,POWER,STATIC
6130-01-351-1088	82A5048A0513	INVERTER,POWER,STATIC
6130-01-352-3548	90001A1900	POWER SUPPLY ASSEMBLY
6130-01-359-5734	50761	POWER SUPPLY
6130-01-359-5734	50761	POWER SUPPLY
6130-01-391-8452	33806-4	POWER SUPPLY
6130-01-391-8452	9377681	POWER SUPPLY
6130-01-420-6617	A3249581-1	POWER SUPPLY
6130-01-422-2051	A3203927	POWER SUPPLY ASSEMBLY
6130-01-443-6655	6374515	POWER SUPPLY
6130-01-467-8627	2113990G1	POWER SUPPLY MC
6130-01-467-8627	2113990G1	POWER SUPPLY MC
6130-01-467-8627	94004A1252	POWER SUPPLY MC
6130-01-467-8627	HPM-3PH-28 SPECIAL	POWER SUPPLY MC
6130-01-467-8627	HPM-3PH-28 SPECIAL	POWER SUPPLY MC
6340-00-173-9074	0871BW1	DETECTOR,ICE
6340-00-173-9074	871BW	DETECTOR,ICE
6340-00-173-9074	871BW	DETECTOR,ICE

6340-00-173-9074	871BW1	DETECTOR,ICE
6340-00-173-9074	871BW1	DETECTOR,ICE
6605-01-056-8831	8020294-10	PLATFORM,INERTIAL
6605-01-056-8831	K140A011-07	PLATFORM,INERTIAL
6605-01-056-8831	X8020294-10	PLATFORM,INERTIAL
6605-01-084-6834	7886769-011	COMPUTER,NAVIGATIONAL
6605-01-084-6834	7886769-011	COMPUTER,NAVIGATIONAL
6605-01-084-7343	204-13479-14	INERTIAL NAVIGATION UNIT
6605-01-084-7343	7553936-031	INERTIAL NAVIGATION UNIT
6605-01-084-7343	94720050-601A	INERTIAL NAVIGATION UNIT
6605-01-084-7343	CP1176A/A	INERTIAL NAVIGATION UNIT
6605-01-231-9755	34078600-001	INERTIAL NAVIGATION UNIT
6605-01-231-9755	34078600-005	INERTIAL NAVIGATION UNIT
6605-01-231-9755	CN-1656A/ASN	INERTIAL NAVIGATION UNIT
6605-01-231-9755	HG1069D	INERTIAL NAVIGATION UNIT
6605-01-231-9758	883300	INERTIAL NAVIGATION UNIT
6605-01-231-9758	890500	INERTIAL NAVIGATION UNIT
6605-01-231-9758	890500-8	INERTIAL NAVIGATION UNIT
6605-01-231-9758	890500-9-551	INERTIAL NAVIGATION UNIT
6605-01-254-6241	7894176-001	INERTIAL NAVIGATION UNIT
6605-01-313-1810	34078600-007	INERTIAL NAVIGATION UNIT
6605-01-319-6483	890500-0201	INERTIAL NAVIGATION UNIT
6605-01-319-6483	890500-201	INERTIAL NAVIGATION UNIT
6605-01-319-6483	CN-1674/ASN	INERTIAL NAVIGATION UNIT
6605-01-321-0107	CN-1674A/ASN	INERTIAL NAVIGATION UNIT
6605-01-321-0107	34078600-311	INERTIAL NAVIGATION UNIT
6605-01-323-1814	890500-9	INERTIAL NAVIGATION UNIT
6605-01-352-4574	34078600-080	INERTIAL NAVIGATION UNIT
6605-01-352-4574	34078600-081	INERTIAL NAVIGATION UNIT
6605-01-353-0943	34078600-008	INERTIAL NAVIGATION UNIT
6605-01-353-0943	9835336	INERTIAL NAVIGATION UNIT
6605-01-353-0943	9835336-10	INERTIAL NAVIGATION UNIT
6605-01-354-0466	34078600-312	INERTIAL NAVIGATION UNIT
6605-01-355-9036	N/A	INERTIAL NAVIGATION UNIT

6605-01-357-8946	N/A	INERTIAL NAVIGATION UNIT
6605-01-387-7002	34078600-664	INERTIAL NAVIGATION UNIT
6605-01-389-0775	890500-203	INERTIAL NAVIGATION UNIT
6605-01-389-0775	9835336	INERTIAL NAVIGATION UNIT
6605-01-389-0775	9835336-30	INERTIAL NAVIGATION UNIT
6605-01-389-4727	34078600-314	INERTIAL NAVIGATION UNIT
6605-01-389-4727	CN-1674A/ASN	INERTIAL NAVIGATION UNIT
6605-01-389-4727	CN-1674/ASN	INERTIAL NAVIGATION UNIT
6605-01-435-1161	34078600-665	INERTIAL NAVIGATION UNIT
6605-01-461-6592	34078600-082	INERTIAL NAVIGATION UNIT
6605-01-481-1856	34078600	INERTIAL NAVIGATION UNIT
6605-01-481-1856	34078600-315	INERTIAL NAVIGATION UNIT
6605-01-481-1856	34078600-315D	INERTIAL NAVIGATION UNIT
6605-01-500-4776	34078600-052	INERTIAL NAVIGATION UNIT
6605-01-500-4776	34078600-050	INERTIAL NAVIGATION UNIT
6605-01-500-4776	754-11200-1	INERTIAL NAVIGATION UNIT
6605-01-500-4776	CN-1711/A	INERTIAL NAVIGATION UNIT
6605-01-530-2925	34078600-083	INERTIAL NAVIGATION UNIT
6605-01-278-6666	12327893	AZIMUTH DRIVE ASSY
6605-01-278-6666	12327893	AZIMUTH DRIVE ASSY
6610-00-110-9455	14-64902-9	COMPUTER,AIR DATA
6610-00-110-9455	948312-6-1	COMPUTER,AIR DATA
6610-00-110-9455	948312-6-1	COMPUTER,AIR DATA
6610-00-121-4680	1620644-4	COMPUTER, ALTITUDE
6610-00-998-8758	808316-2-2	COMPUTER SUBASSEMBLY
6610-00-998-8758	808316-2-2	COMPUTER SUBASSEMBLY
6610-00-999-5280	15978-11	RELATIVE WIND TRANSDUCER
6610-01-010-2018	HG180U247	COMPUTER,AIR DATA
6610-01-017-4788	Z1989502-247	COMPUTER SUBASSEMBLY
6610-01-017-4789	Z1989503-235	COMPUTER SUBASSEMBLY
6610-01-020-0130	Z1989504-247	COMPUTER SUBASSEMBLY
6610-01-039-7817	16C0715-1	ACCELEROMETER ASSEMBLY,ELECTRICAL
6610-01-039-7817	16C0715-3	ACCELEROMETER ASSEMBLY,ELECTRICAL
6610-01-047-6627	2100756-3-1	COMPUTER,AIR DATA

6610-01-255-1433	31103-A1A	COMPUTER, ALTITUDE
6610-01-330-4903	372-028-003	PANEL,FUEL MANAGEMENT
6610-01-330-4903	372-028-003	PANEL,FUEL MANAGEMENT
6610-01-396-5344	367-046-004	COMPUTER,FUEL MANAGEMENT
6610-01-396-5344	367-046-004	COMPUTER,FUEL MANAGEMENT
6610-01-396-5344	CPK-146/A24J-24	COMPUTER,FUEL MANAGEMENT
6610-01-429-6897	160333-10-01	RECORDER,FLIGHT DATA
6610-01-429-6897	16VF050001-10	RECORDER,FLIGHT DATA
6610-01-502-3969	10-3056-511	DISTRIBUTION BOX
6610-01-502-3969	16906-1G	DISTRIBUTION BOX
6610-01-502-3969	16906-1G	DISTRIBUTION BOX
6615-01-007-4290	10-3056-511	CONTROLLER,FLIGHT,AUTOMATIC PILOT
6615-01-007-4290	16906-1G	CONTROLLER,FLIGHT,AUTOMATIC PILOT
6615-01-007-4290	16906-1G	CONTROLLER,FLIGHT,AUTOMATIC PILOT
6615-01-013-5966	10-3056-201	AMPLIFIER-COMPUTER
6615-01-013-5966	18757-1C	AMPLIFIER-COMPUTER
6615-01-013-5966	18757-2C	AMPLIFIER-COMPUTER
6615-01-013-5966	1879051-1	AMPLIFIER-COMPUTER
6615-01-084-6834	7886769-011	COMPUTER,NAVIGATIONAL
6615-01-084-6834	7886769-011	COMPUTER,NAVIGATIONAL
6615-01-127-3160	16C0605-825	CONTROLLER,ENGAGING,AUTOMATIC PILOT
6615-01-127-3160	16C0605-825	CONTROLLER,ENGAGING,AUTOMATIC PILOT
6615-01-127-3160	16C0605-825	CONTROLLER,ENGAGING,AUTOMATIC PILOT
6615-01-397-7980	5050051-9	CONTROLLER,FLIGHT,AUTOMATIC PILOT
6615-01-397-7980	CP-2284/AYW-1(V)	CONTROLLER,FLIGHT,AUTOMATIC PILOT
6625-01-037-0429	11683A	CALIBRATOR,ELECTRICAL POWER
6625-01-037-0429	11683A	CALIBRATOR,ELECTRICAL POWER
6625-01-037-0429	11683A	CALIBRATOR,ELECTRICAL POWER
6625-01-037-0429	HP11683	CALIBRATOR,ELECTRICAL POWER
6625-01-246-7142	2231935-001	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
6625-01-246-7142	2231935-003	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
6625-01-246-7142	2231935-004	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
6625-01-246-7142	2231935-006	PLUG-IN UNIT,ELECTRICAL-ELECTRONIC TEST EQUIPMENT
6625-01-250-5548	3336C-004-005	SYNTHESIZER,ELECTRICAL FREQUENCY

6625-01-250-5548	3336C-004-005	SYNTHESIZER,ELECTRICAL FREQUENCY
6625-01-250-5548	MIL-HDBK-300(PME)	SYNTHESIZER,ELECTRICAL FREQUENCY
6625-01-286-3567	8644A	GENERATOR,SIGNAL
6625-01-286-3567	8644A	GENERATOR,SIGNAL
6625-01-286-3567	91721874	GENERATOR,SIGNAL
6625-01-292-7347	5700A-03	CALIBRATOR,VOLTAGE
6625-01-292-7347	5700A-03	CALIBRATOR,VOLTAGE
6625-01-292-7347	5700A-03	CALIBRATOR,VOLTAGE
6625-01-292-7347	5700A/AN	CALIBRATOR,VOLTAGE
6625-01-292-7347	890574	CALIBRATOR,VOLTAGE
6625-01-333-9512	5725A	AMPLIFIER,DIRECT CURRENT
6625-01-333-9512	5725A	AMPLIFIER,DIRECT CURRENT
6625-01-333-9512	5725A	AMPLIFIER,DIRECT CURRENT
6625-01-333-9512	5725A/AN	AMPLIFIER,DIRECT CURRENT
6625-01-333-9512	827139	AMPLIFIER,DIRECT CURRENT
6625-01-333-9512	U455-26	AMPLIFIER,DIRECT CURRENT
6625-01-380-3922	7005-1142-300	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-380-3922	7005-7848-300	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-380-3924	7005-7846-300	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-380-3925	7005-7847-800	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-423-2992	TDS540A	OSCILLOSCOPE
6625-01-432-3819	9001-1502-300	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-432-3819	9001-1502-500	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-432-3819	PL-1536/GRM	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-432-3819	PL-1536/GRM/J-4843A	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-445-3623	8114A-001	GENERATOR,PULSE
6625-01-445-3623	8114A-001	GENERATOR,PULSE
6625-01-445-3623	8114AOPT001	GENERATOR,PULSE
6625-01-458-5217	8720D	ANALYZER,NETWORK
6625-01-476-4133	7005-1142-200	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-476-8966	7005-1142-300	TEST SET SUBASSEMBLY,ELECTRICAL AND ELECTRONIC TEST EQUIPMENT
6625-01-492-0852	E4433B	GENERATOR,SIGNAL
6625-01-501-5659	53132AOPT010-030	COUNTER,ELECTRONIC,DIGITAL READOUT
6625-01-501-5659	53132AOPT010-030	COUNTER,ELECTRONIC,DIGITAL READOUT

6625-01-530-6329	10-12006-01	ANALYZER,SPECTRUM
6625-01-530-6329	E4440A	ANALYZER,SPECTRUM
6625-01-538-9321	N5230A OPT 220	ANALYZER,NETWORK
7021-01-384-4791	HD-006-A-2-2	COMPUTER,DIGITAL
7025-01-467-4709	96-23569	DISPLAY UNIT
7025-01-467-4709	96-23569	DISPLAY UNIT
7025-01-499-9143	10511-1300-03	DISPLAY UNIT
7025-01-528-4013	7608-0313	TEVA VIEWER
7025-01-531-7373	10511-1100-03	KEYBOARD,DATA ENTRY